

# Cleaning Procedure Sheet 1 (Starting)

FOR ALL 'FREEDOM' SYSTEMS

T: 01761 479 710

F: 0870 132 5281

E: help@phoenixabc.co.uk

W: www.phoenixabc.co.uk



1. Disconnect coupler from the keg.



2. Switch the Gas OFF to the product.



3. Turn any pump assist units OFF (If fitted).



4. Connect to the cleaning socket.



5. Put the FoB in to 'CLEAN' mode.



6. Check correct ring-main feed is connected.



7. Switch ON & press START only.



8. Vent/bleed FoB to remove all gas.



9. Press 'CLEAN'.



10. Remove any restricted nozzles.



11. Fit HIT adaptor. (If fitted)



12. Fit hose to tap.



13. Fit hose to waste.



14. Open tap. (For KEG cleaning)



15. Open check valve. (For CASK cleaning)

SEE SHEET TWO FOR THE END OF THE CYCLE

© PhoenixABC Limited 2003